

Service manual & spare parts list

Version 2021-09-08





Registered at Medical Products Agency, Sweden as a MDR Class 1 product according to MDR 2017/745.

TR reserves the right to make design changes and/or improvements without notice.





Table of contents

Introduction	3
Manufacturer	4
Spare parts list TR 2000	5
Spare parts list TR 3000, onboard batteries	7
Spare parts list TR 3000R, removable battery	7
Wiring diagram circuit board TR 3000, onboard batteries	13
Wiring diagram circuit board TR 3000R, removable battery	14
Service instructions	15
- How to replace the hydraulic pump - TR 2000	15
- How to replace the pump pedal – TR 2000	15
- How to replace the battery powered lifting column – TR 3000	16
- How to replace the castors	17
- How to replace the gas struts	18
- How to replace the tilt wire	19
- How to replace the foot control or hand control	20
- Battery enclosure TR 3000, onboard batteries	21
- Battery enclosure TR 3000R, removable battery	22
- Electrical trouble shooting, onboard batteries	23
- Electrical trouble shooting, removable battery	24



Introduction

Dear customer,

If you need spare parts and can't find it in the spare parts list, contact TR Equipment.



Manufacturer



TR Equipment AB Rundelgatan 2 SE-573 35 Tranås Sweden


Phone: +46 (0)140 38 50 60

www.trequipment.com info@trequipment.se



Spare parts TR 2000, hydraulic shower trolley

TR 2000, -S, -L, -W Mod.21

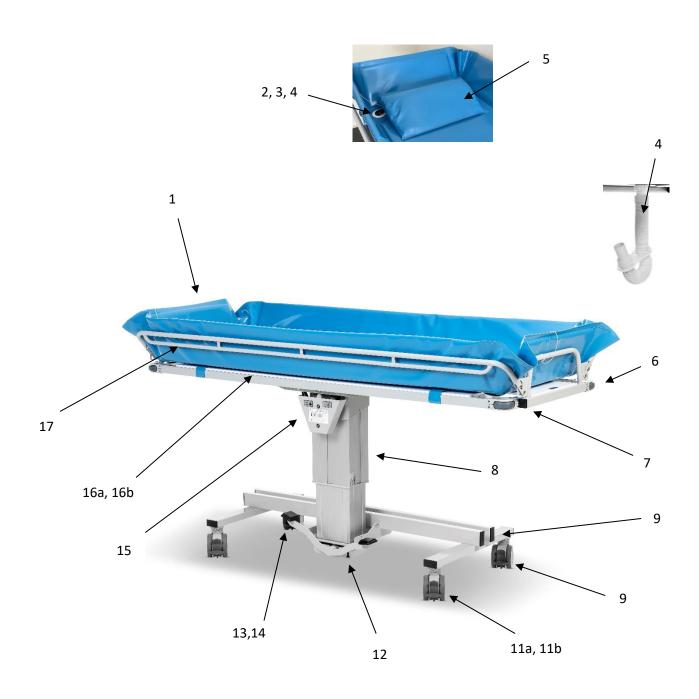



Spare parts TR 2000, hydraulic shower trolley

Position	Par number	Spare part	Standard equipment/Option
1	7334645-02	Mattress, Blue, 1900mm	Standard equipment
1	7334645-05	Mattress, Blue, -S, 1600mm	Standard equipment
1	7334645-08	Mattress Blue, -L, 2100mm	Standard equipment
1	7333480-04	Mattress, Blue, -W, 1950mm	Standard equipment
2	829392	Drainage	Standard equipment
3	829391	Drainage plug	Standard equipment
5	820818-4224	Drainage hose, 1M	Standard equipment
5	820818-4224-25	Drainage hose, 2.5M	Option
5	7419488-04	Pillow, Blue	Standard equipment
5	7419488	Pillow, Grey	Option
5	7419488-07	Pillow, Yellow	Option
5	7418363-02	Wedge pillow, Blue, 15°	Option
5	7418363	Wedge pillow, Grey, 15°	Option
5	7418363-03	Wedge pillow, Yellow, 15°	Option
6	850133-75	Bumper wheels	Standard equipment
7	851738	End plug 35*35, stretcher	Standard equipment
8	200121	Hydraulic lifting column	Standard equipment
	819200	Hydraulic pump (included in 200121)	Standard equipment
	850256	Tension spring (included in 200121)	Standard equipment
9	850283	End plug 60*30, chassis	Standard equipment
10	851760	Castor with brake (transfer side)	Standard equipment
11 a	851760	Castor with brake (nursing side)	Standard equipment
11 b	851761	Straight steering castor (nursing side)	Option
12	3334291	Pedal arm, foot pedal	Standard equipment
13	3428405	Pedal plate, foot pedal	Standard equipment
14	7429583	Pedal plate cover, foot pedal	Standard equipment
15	850268	Gas spring (2pcs behind the cover)	Standard equipment
16 a	7334060	Plastic plate 1, TR 2000, 1222*625mm	Standard equipment
1 6b	7334060-02	Plastic plate 2, TR 2000, 662*625mm	Standard equipment
16 a	7334060-07	Plastic plate, TR 2000-S, 1600*640mm	Standard equipment
16a	7334060-03	Plastic plate 1, TR 2000-L,	Standard equipment
		1322*625mm	
16b	7334060-04	Plastic plate 2, TR 2000-L, 762*625mm	Standard equipment
16a	7334060-05	Plastic plate 1, TR 2000-W, 1247*680mm	Standard equipment
16b	7334060-06	Plastic plate 2, TR 2000-W, 687*680mm	Standard equipment
17	3234161-1900	Side rail TR 2000	Standard equipment
17	3234161-1600	Side rail TR 2000-S	Standard equipment
17	3234161-2100	Side rail TR 2000-L	Standard equipment
17	3234161-1950	Side rail TR 2000-W	Standard equipment




TR 3000, -S, -L Mod.21






TR 3000, -S, -L Mod.21,

Battery enclosure TR3000, part number: 200119

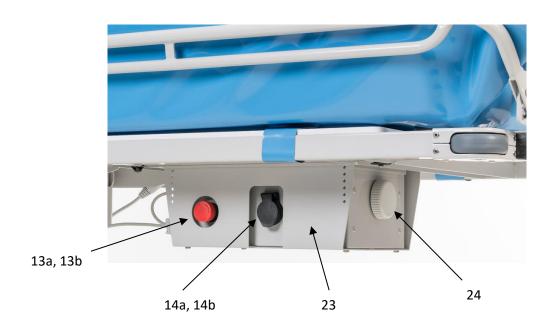

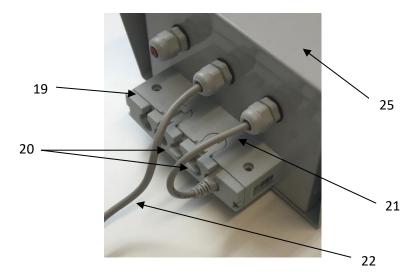




Spare parts

TR 3000R, -S, -L Mod.21,

Enclosure TR3000R, removable battery

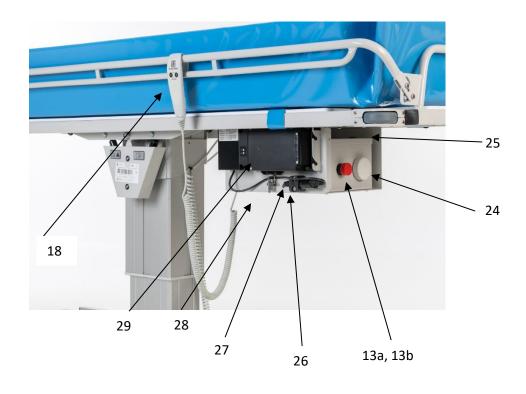





Position	Part number	Spare part	Standard equipment/Option
1	7334645-02	Mattress, Blue, 1900mm	Standard equipment
1	7334645-05	Mattress, Blue, -S, 1600mm	Standard equipment
1	7334645-08	Mattress Blue, -L, 2100mm	Standard equipment
2	829392	Drainage	Standard equipment
3	829391	Drainage plug	Standard equipment
5	820818-4224	Drainage hose, 1M	Standard equipment
5	820818-4224-25	Drainage hose, 2.5M	Option
5	7419488-04	Pillow, Blue	Standard equipment
5	7419488	Pillow, Grey	Option
5	7419488-07	Pillow, Yellow	Option
5	7418363-02	Wedge pillow, Blue, 15°	Option
5	7418363	Wedge pillow, Grey, 15°	Option
5	7418363-03	Wedge pillow, Yellow, 15°	Option
6	850133-75	Bumper wheels	Standard equipment
7	851738	End plug 35*35, stretcher	Standard equipment
8	7440006	Electric lifting column	Standard equipment
9	850283	End plug 60*30, chassis	Standardutrustning
10	851760	Castor with brake (transfer side)	Standard equipment
11a	851760	Castor with brake (nursing side)	Standard equipment
11b	851761	Straight steering castor (nursing side)	Option
12	7440008	Foot pedal incl. spiral cable	Standard equipment
13a	819310	Emergency stop button	Standard equipment
13b	819312	Contact block for 819310 (inside enclosure)	Standard equipment
14a	819150	Mag Code, port	Standard equipment
14b	819148	Mag Code, charging connector	Standard equipment
15	850268	Gas spring (2pcs behind cover)	Standard equipment
16a	7334060	Plastic plate 1, TR 3000, 1222*625mm	Standard equipment
16b	7334060-02	Plastic plate 2, TR 3000, 662*625mm	Standard equipment
16a	7334060-07	Plastic plate, TR 3000-S, 1600*640mm	Standard equipment
16a	7334060-03	Plastic plate 1, TR 3000-L, 1322*625mm	Standard equipment
16b	7334060-04	Plastic plate 2, TR 3000-L, 762*625mm	Standard equipment
17	3234161-1900	Side rail TR 2000/3000	Standard equipment
17	3234161-1600	Side rail TR 2000-S / 3000 S	Standard equipment
17	3234161-2100	Side rail TR 2000-L / 3000 L	Standard equipment
18	7440001	Hand control	Option



Battery enclosure TR 3000, onboard batteries

Position	Part number	Spare part	
13a	819310	Emergency stop button	
13b	819312	Contact block for 819310 (inside enclosure)	
	829144	EPDM gasket, emergency stop	
14a	819150	Mag Code, port	
14b	819148	Mag Code, charging connector	
	829143	EPDM gasket, Mag Code port	
17	851650	Cable gland PG9	
	851650-03	EPDM gasket, cable gland PG9	
	851650-02	IP plugg for cable gland PG9	
	810146-5415	Nut for cable gland PG9	
19	7440002	MJB Junction box	
20	7440004	IP Plug, MJB junction box	
21	7440003	Circuit board cable, MJB junction box	
22	7440007	Cable, Lifting column	
23	3334619	Mounting plate, battery enclosure	
24	819171	Vent plug	
25	3434698	Lid, battery enclosure	
		Inside enclosure	
	819030	Lead battery 12V 7Ah (2st)	
	819354-02	Circuit board	
	850722	Circuit board holder	
	7429679	Cabling	
	3330022	Battery holder	
		Battery charger	
	0541226	Battery charger Mag Code	
	819140	EU Plug for battery charger	
	819141	US Plug for battery charger	
	819142	UK Plug for battery charger	
	819143	AUS Plug for battery charger	




Enclosure TR 3000R, removable battery

Docition	Autilialia i mana au	Decembel	
Position	Artikelnummer	Reservdel	
13a	819310	Emergency stop button	
13b	819312	Contact block for 819310 (inside enclosure)	
	829144	EPDM gasket, emergency stop	
17	851650	Cable gland PG9	
	851650-03	EPDM gasket for cable gland PG9	
	851650-02	IP plugg for cable gland PG9	
	810146-5415	Nut for cable gland PG9	
19	7440002	MJB Junction box	
20	7440004	IP plug for MJB junction box	
21	7440003	Circuit board cable, MJB junction box	
22	7440007	Cable, Lifting column	
24	819171	Vent plug	
25	3434698	Lid, enclosure	
26	850244	Holder for charging connector (2pcs required)	
27		Male charging connector incl. cable	
28	3334626	Mounting plate, enclosure & battery holder	
29		Lithium battery	
	200110	Lithium battery incl. mounting plate and cable	
	853101	Adapter cable (included in 200110)	
		Inside enclosure	
	819354-02	Circuit board	
	850722	Circuit board holder	
		Battery charger	
	0521197	Battery charger EU	
	0521198	Battery charger US	
	0521199	Battery charger UK	
	0521196	Battery charger AUS	



Wiring diagram, circuit board


TR 3000, onboard battery

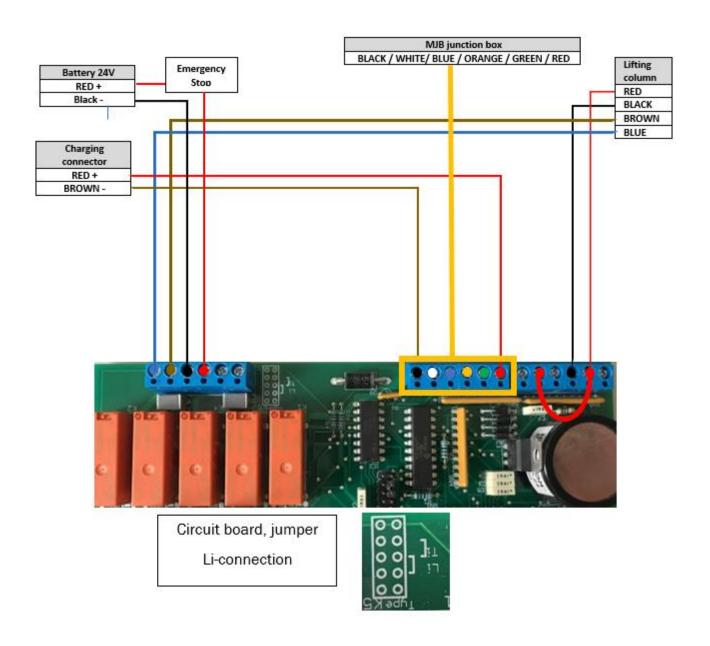



Wiring diagram, circuit board

TR 3000R (removable Lithium battery)

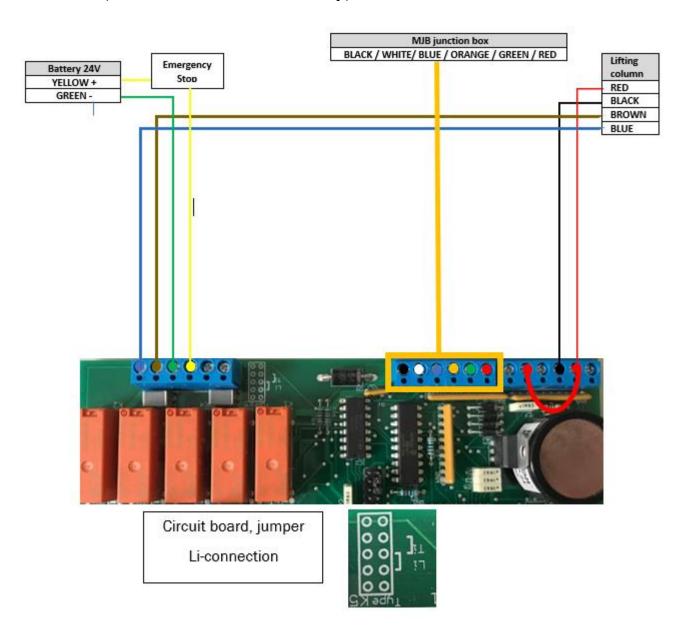




TR 2000 - How to replace the hydraulic pump and foot pedal.





Foot pedal screw

Piston rod screw

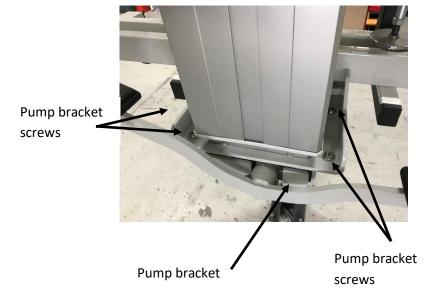



Pull out he pump / Assemble pump

- Remove mattress, pillow, and plastic plate from the shower trolley.
- Loosen and remove the Foot pedal screw.
- Loosen and remove the Piston rod screw.
- Loosen and remove the pump bracket.
- Pull out the pump and bracket from the lifting column.
- Loosen and remove the hydraulic pump from the Pump bracket.
- Assemble the new pump on the bracket and push the pump into the lifting column.
- Fasten the piston rod with the piston rod screw. Tighten the screw 50%.
- Fasten the pump bracket.
- Tighten the Piston rod screw 100%.
- Re-assemble plastic plate and mattress.




TR 3000 - How to replace the battery powered lifting column



Lifting column hat.

Loosen and remove the screws.

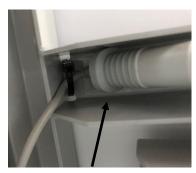

Lifting column connector



MJB Junction box



Loosen and remove the four lifting column screws.

- Remove mattress, pillow, and plastic plate.
- Disconnect the lifting column cable and the cable from the battery enclosure.
- Loosen and remove the foot pedal cable from the MJB Junction box.
- Unscrew the lifting column hat placed on the top of the lifting column.
- Lift the stretcher and lifting column hat off the lifting column.
- Unscrew the lifting column from underneath.
- Assemble the new lifting column in reversed order. Note the position of the lifting column cable.
- If necessary, fasten cables with cable ties.



TR 2000 / TR 3000 - How to replace the castors



Bolt & washer



Washer between castor and chassis.

Straight steering castor (factory mounted option).



Note the position of the pedal when the straight steering function is activated.

Castor with brake

- Unscrew the bolt and washer and remove the castor.
- Put the bolt and washer through the new castor. Put Loctite 243 to the bolt threads.
- Make sure the washer between castor and chassis is in correct position.
- Tighten the bolt.
- Verify that the brake function on the castor is working properly.


Straight steering castor (factory mounted option)

Same instructions as for the castor with brake, but the washer between straight steering castor and chassis has two straight steering pins.

- Press the Black straight steering pedal until a click is heard.
- Rotate the castor disc until a click is heard.
- Put the bolt and washer through the new straight steering castor.
 Put Loctite 243 to the bolt threads.
- Assemble the straight steering castor with the pedal pointing inwards.
- Tighten the bolt.
- Verify that the straight steering function on the castor is working properly.



TR 2000 / TR 3000 - How to replace the gas struts

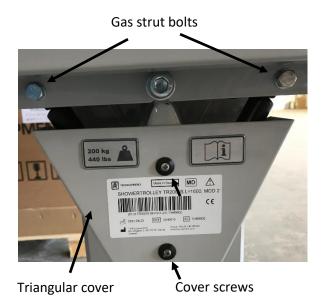







- Unscrew and remove the triangular cover.
- Loosen the tilt wire (DO NOT REMOVE) in one of the short ends of the stretcher.
- Loosen and remove the Gas strut bolts.
- Unscrew the Gas strut counter clockwise, from the bracket.
- Assemble the new Gas strut into the bracket, tighten the black screw.
- Make sure you don't damage/bend the gas strut pin during the assembly.



TR 2000 / TR 3000 - How to replace the tilt wire

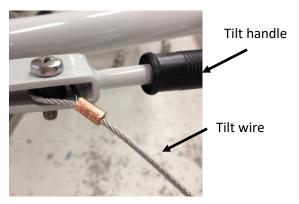

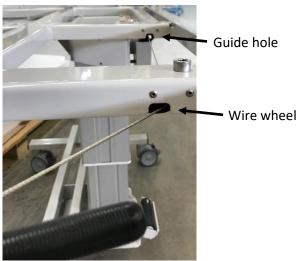




- Remove mattress, pillow, and plastic plate from the shower trolley.
- Unscrew the tilt wire from both tilt handles and remove the tilt wire from the stretcher and gas strut bracket.
- Unscrew the triangular cover.
- Assemble the new tilt wire to one tilt handle. Tighten the nut 50%.
- Place the tilt wire towards the wire wheel, through the guide hole, through the column hat, through the guide hole and wire wheel on the opposite side and fasten the tilt wire to the second tilt handle.
- Fasten the tilt wire on the second tilt wire.
- Tension the tilt wire and fasten screw and nut 100%.
- Verify that the tilt function works properly. If necessary, adjust the tensioning.




How to replace foot control or hand control

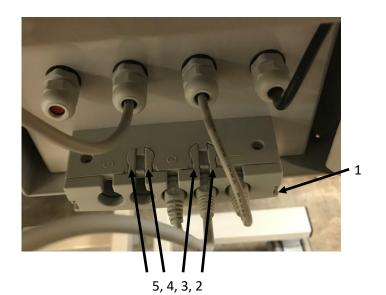

Use a small screwdriver for following steps.

- 1. Press the lever to release the MJB bracket.
- 2-5. Push up the levers, one at a time.

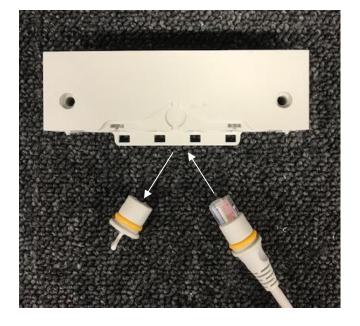


Remove the plug and replace it with the cable for the hand control.


Attach the cover again.



Battery enclosure Onboard battery

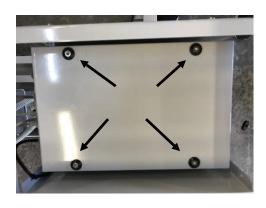


- Remove mattress, pillow, and plastic plate from the shower trolley.
- Unscrew the lid.

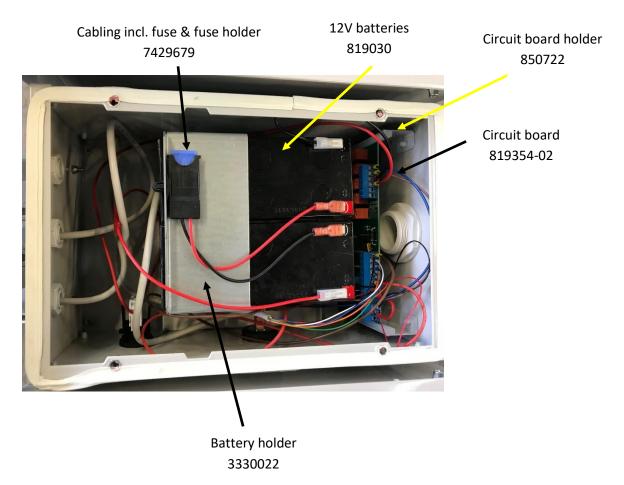



Battery enclosure Removable battery

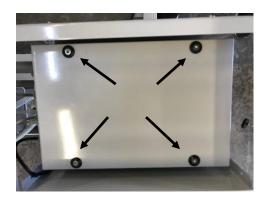


- Remove mattress, pillow, and plastic plate from the shower trolley.
- Unscrew the lid.



Emergency stop 819310 Contact block 819312 EPDM gasket 829144

Vent plug 819171

Circuit board holder • 850722

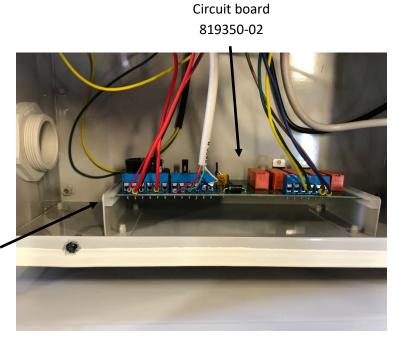



Electrical trouble shooting, TR 3000 On board batteries

Problem	Check list
The lifting column doesn't work.	 Is the emergency stop activated? (Release if necessary) Is the contact block for the emergency properly fastened? Check the voltage on both batteries. Check the connections on the circuit board. Check the wiring diagram. Is the Circuit board jumper in Li-position? Is the foot control or hand control, OK? Replace lifting column.
The lifting column only work small steps at a time.	 Check that the circuit board jumper is in Li-position. Check the wiring diagram. Replace circuit board. Replace the lifting column.
There's a beep coming from the shower trolley.	 If the beep is a long and short beep the batteries must be charged. If the beep is one long and two short the lifting column needs to be calibrated. (See table of contents in the Operating manual)
It's not possible to charge the batteries. (The LED light on the battery charger turns Green immediately when I connect the battery charger.)	 Check if the emergency stop is activated. (Release if necessary.) Is the contact block for the emergency stop is properly fastened? One or both batteries probably have too low voltage. Check the voltage and replace if necessary. Replace circuit board.



Electrical trouble shooting, TR 3000 Removable battery

Problem	Check list
The lifting column doesn't work.	- Is the battery ON? (Press the ON button) - Is the battery charged? (charge the battery for at least 8 hours) Is the emergency stop activated? (Release if necessary) - Is the contact block for the emergency properly fastened? - Check the connections on the circuit board Check the wiring diagram Is the Circuit board jumper in Li-position? - Is the foot control or hand control, OK? - Replace lifting column.
The lifting column only work small steps at a time.	 Check that the circuit board jumper is in Li-position. Check the wiring diagram. Replace circuit board. Replace the lifting column.
There's a beep coming from the shower trolley.	 If the beep comes from the battery and the battery has an orange light, the battery must be charged. If the beep is one long and two short the lifting column needs to be calibrated. (See table of contents in the Operating manual)
It's not possible to charge the battery.	 Replace the battery.