# AirRise200 Quick User Guide



## Charging

To ensure a long service life of the batteries, please ensure that the hoist is left on charge when not in use.

To charge the AirRise200™, follow the following procedure:


- Place the hand control in the wall charger (Figure 1)
- Check if the indicator light lights up (Figure 2)
- Leave hoist on charge for about 8 hours.

To ensure the batteries are kept in good condition, always put the hoist on charge after use. Never allow the battery to fully discharge.



### **Hand Control**

The plug of the hand control should be placed firmly in the input at the bottom of the lift. The cord of the hand control can, if requested, be fitted with a strain release or fixed with screw-thread.

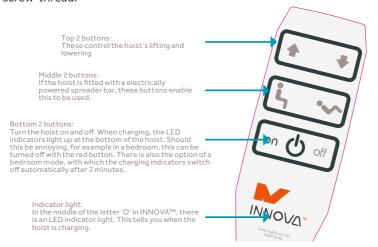

# AirRise200 Quick User Guide



## **LED Indicator Lights**





#### **GREEN STATUS**

If the hoist is active, the indicators light up green.

The hoist switches itself off after approximately 30 minutes, the green light will then turn off. By pushing the On button, the lift will activate automatically. This is to save power.

### **ORANGE STATUS**

The orange light indicates that the batteries should be charged at the first opportunity.

The battery is not at critical level, but gives an indication that charging is desired. The batteries must be charged as described in section 2.3.

#### **RED STATUS**

The batteries have reached a critical level, the hoist must not be used, further discharge will damage the batteries. The batteries must be charged as described in section 2.3.

## Weight limit

The weight limit of the AirRise200™ is 200kg (31.5 Stone).

## **Emergency Pull Cord**

The hoist immediately stops all functions when the red emergency cord is pulled.

If you continue to pull the cord, the spreader bar will slowly move downwards. This movement stops as soon as the cord is released.

The AirRise  $200^{TM}$  is now completely switched off. To re-activate the hoist, press the On button on the hand control.

